

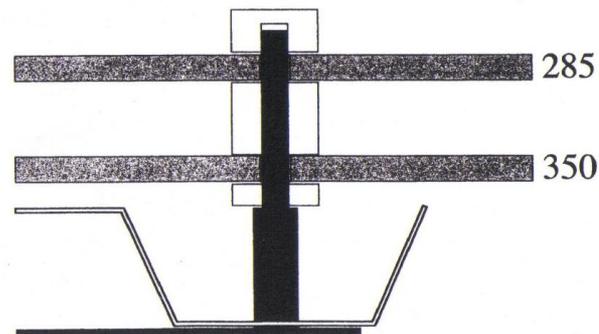


Mounting sequence: first the big glass, then the little glass, at the end the medium glass. You have to use the equipped spacers in order to balance the heights as shown in the below scheme. The socket has to be under the medium glass.

CONCENTRIK
applique

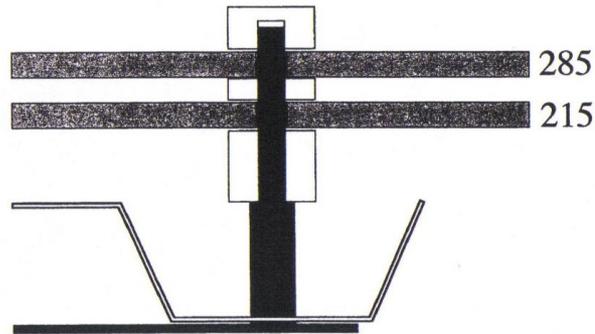

CONCENTRIK
applique

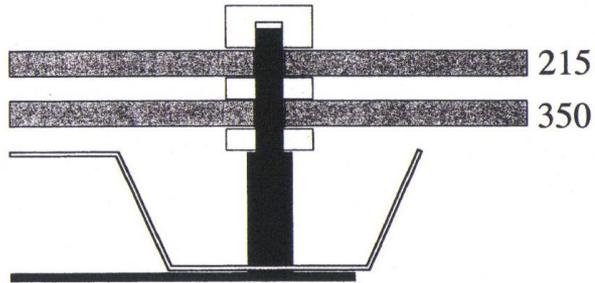